

Product Data Sheet

DIAION™ UBA100OHP

DIAION™ UBA100OHP is an anion exchange resin with a uniform particle size. It has a standard cross-linkages and anti-clumping characteristics and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water, is recommended.

Product

Grade Name	DIAION™ UBA100OHP	
Type	Strong Base Anion	
Matrix	Styrene-DVB, Gel	
Functional Group	Type I (trimethyl ammonium groups)	
Ionic Form	OH ⁻	

Specification

Whole Bead Count	-	90 min.
Salt Splitting Capacity	meq/mL	1.0 min.
Water Content	%	59 - 65
Mean Particle Size	µm	590 ± 50
Uniformity Coefficient	-	1.10 max.
Ionic Form Conversion (OH ⁻)	eq%	90 min.
Ionic Form Conversion (Cl ⁻)	eq%	1 max.

Typical Properties

Shipping Density	g/L	660
Particle Density	g/mL	1.07
Total Swelling (Cl ⁻ to OH ⁻)	%	23

Recommended Operating Conditions

Maximum Operating Temperature	°C	80 (Cl ⁻) 60 (OH ⁻)
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		NaOH
Regenerant Concentration	%	NaOH 2 - 8
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 8
Total Rinse Requirement	BV	2 - 10

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ UBA100OHP resin in normal down flow operation is shown in the graphs below.

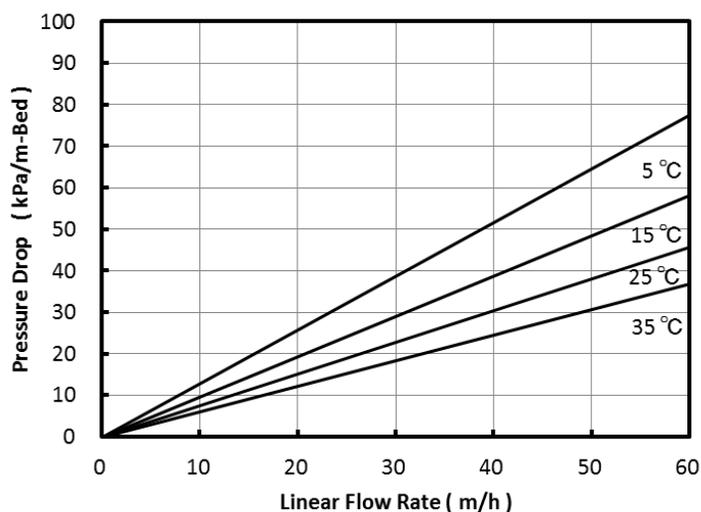


Fig. 1 Pressure Drop of UBA100OHP

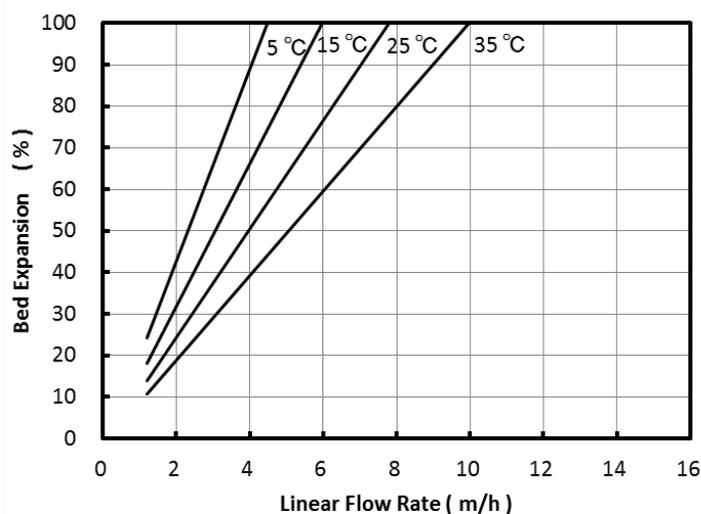


Fig. 2 Bed Expansion of UBA100OHP

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.